


PM

SERIE 50 P PT


50025 P PT

Diagramma portate - D'igramme de charge - Leistungsdiagramme - Capacity chart - Diagrama de carga




kg	21200	9910	6850	5180	4030	3300	2750
m	1.95	4.35	6.20	8.05	10.10	12.15	14.35
lbs	46470	21850	15100	11420	8880	7270	6060
ft	6'5"	14'3"	20'4"	26'5"	33'2"	39'10"	47'1"

ACCESSORI - OPTIONAL




kg	2180	1580	1315	1050
m	16.65	18.45	20.30	22.20
lbs	4810	3480	2900	2310
ft	54'8"	60'6"	66'7"	72'10"



J 903.20

kg	1670	1410	950	680	460	370	300
m	17.10	18.75	20.55	22.40	24.35	26.20	28.10
lbs	3680	3110	2090	1500	1010	810	660
ft	56'1"	61'6"	67'5"	73'6"	79'11"	85'11"	92'2"



J 904.20

kg	1560	1330	820	570	460	370	300
m	17.15	18.80	20.60	22.40	24.30	26.10	28.00
lbs	3440	2930	1810	1260	1010	810	660
ft	56'3"	61'8"	67'7"	73'6"	79'9"	85'8"	91'10"

Per maggiori informazioni consultare il manuale di "Usa e Manutenzione" in dotazione alla macchina.
 Pour avoir plus d'informations, consultez le manuel d'Usage et Entretien joint à la machine.
 Für weitere Informationen lesen Sie bitte die der Maschine beiliegende Bedienungs- und Wartungsanleitung.
 For further information, consult the Operator's Manual supplied with the machine.
 Para mayores informaciones consultar el manual de Uso y Manutención suministrado con la máquina.

5.171.032